

DISHWASHER INSTRUCTIONS

****This dishwasher will not clean dried on food. Please rinse dishes before putting them in dishwasher****

1. To turn on, press "ON".
It will take 8-10 minutes for the water reservoir to heat up the first time.
2. When the temperature reaches 150°, it is ready for a wash cycle.
See the display window on the door of the washer.
3. Open the door and add one level tablespoon of commercial grade detergent. Pour into the bottom of the washer.
Less detergent may be needed for additional loads, but some will still be needed.
4. Slide one rack of dishes into the dishwasher and close the door.
Do not stack dirty racks of dishes. Only one rack can be washed at a time.
5. Press "WASH".
The wash cycle takes about 2-3 minutes.
6. At the end of the wash / rinse cycle, remove clean rack and place on counter above dishwasher.
7. Slide in another rack and repeat steps 3-6.
8. When done washing all of the dishes, press "OFF". The machine will drain and shut down.
The dishwasher can sit idle for a period of time before automatically shutting down.
9. Remove the rectangular screen at the bottom of the dishwasher to clean out any food particles.